

Nimbus

Instructions for Reclining Sofas

 
KING[®]
L I V I N G

Warning:


Do not sit on footrest when in open reclined/extended position.

MAXIMUM LOAD 15 KG.

Always **RETRACT FOOTREST** prior to standing.

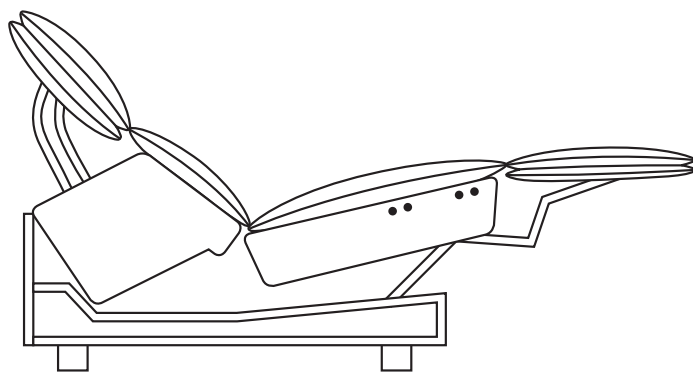

Obstruction Detection

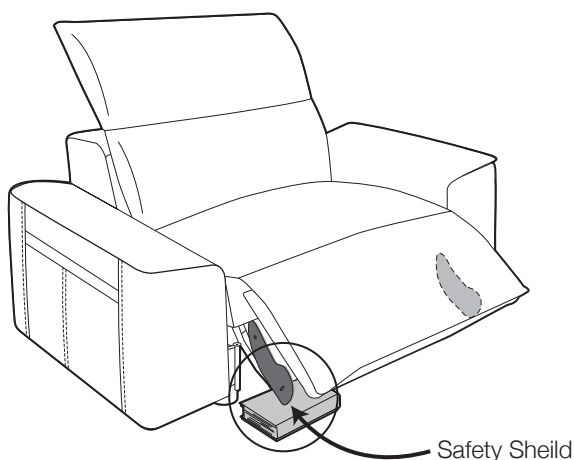 


IF THE RECLINER DOESN'T
CLOSE, THERE MAY BE AN
OBSTRUCTION INTERFERING
WITH THE SAFETY SHIELD

REMOVE OBSTRUCTION BEFORE
FURTHER OPERATION



 THE SAFETY SHIELD MAY ALSO
BE TRIGGERED BY A THICK RUG
UNDER THE SOFA. IF THE RUG
CANNOT BE MOVED OUT OF THE
WAY OF THE SAFETY GUARD,
PLEASE CONTACT CUSTOMER
SERVICE

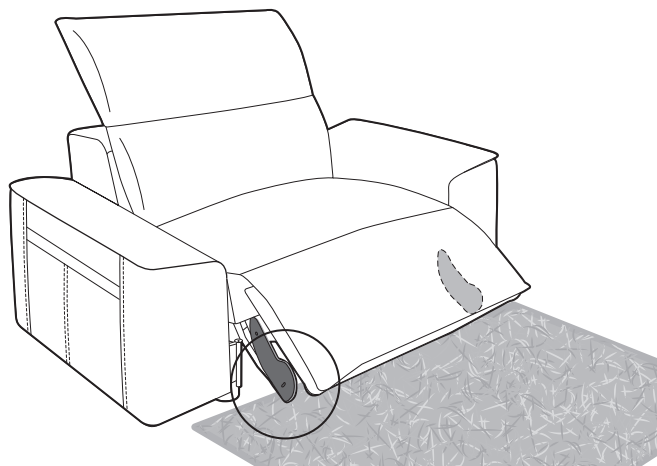


Nimbus

Quick Start Guide | Setup




Step 1: Parts

 
Important – Do not connect power until step 6

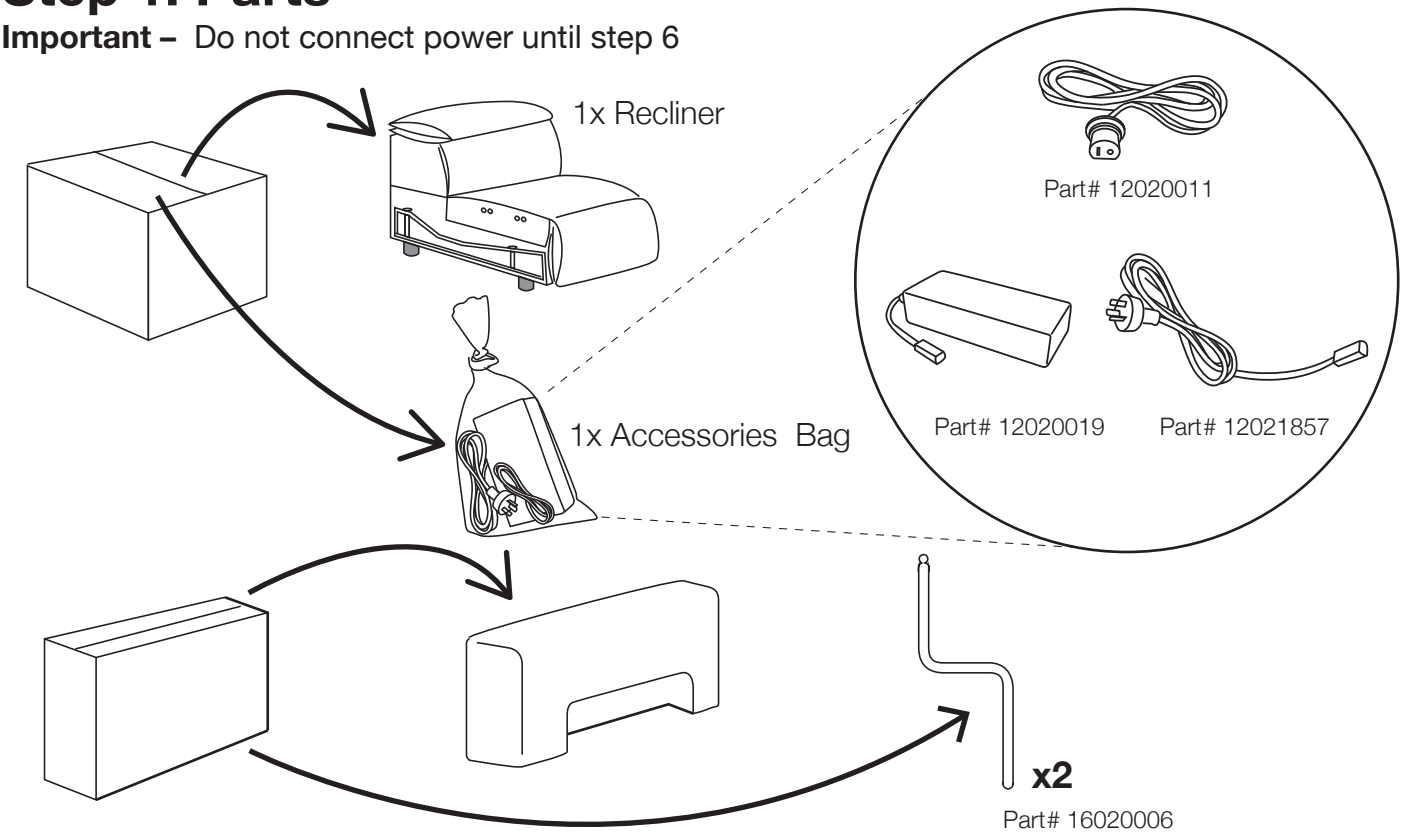

 
Step 2: Join Modules

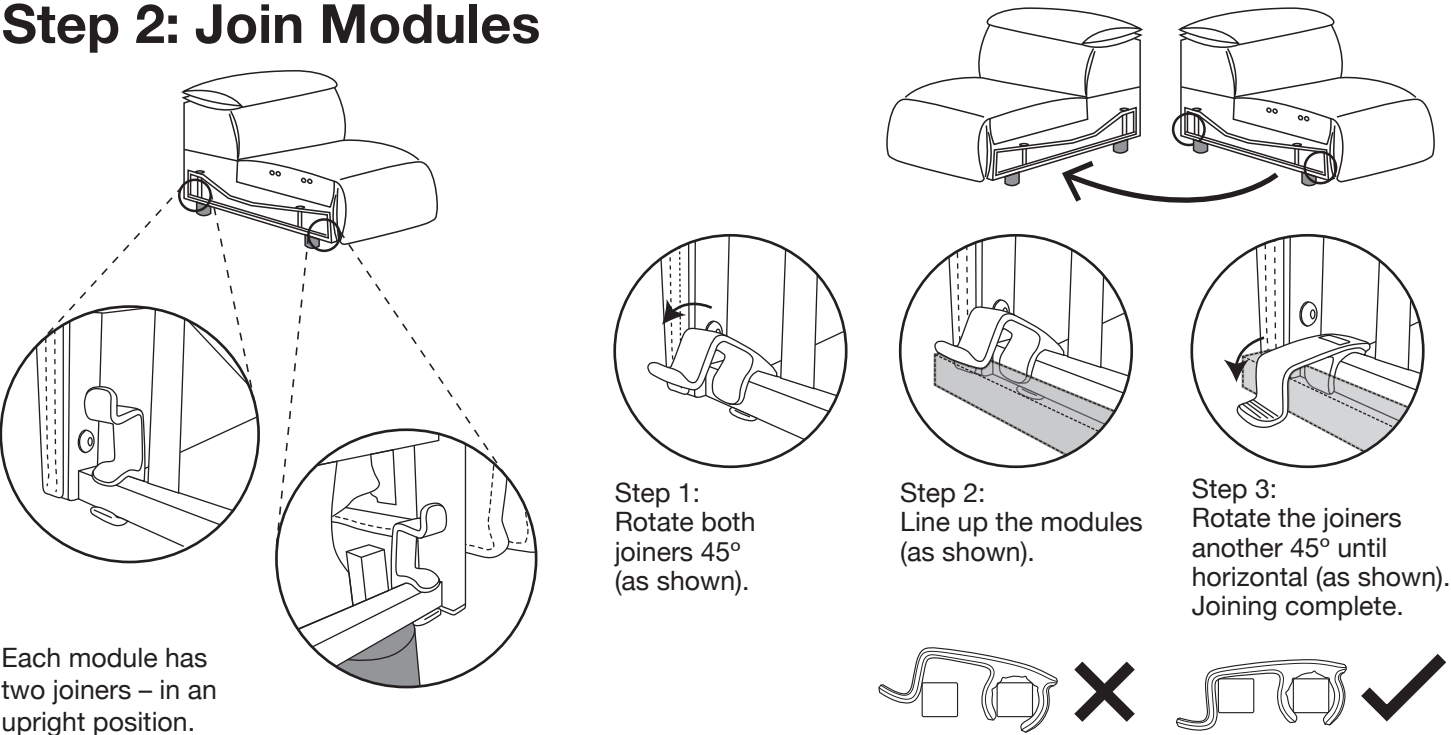

 Step 3: Assembling Arms

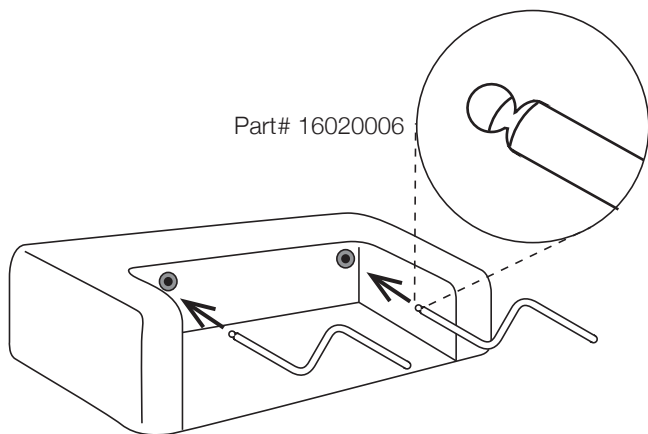

 
Step 4: Assembling Arms

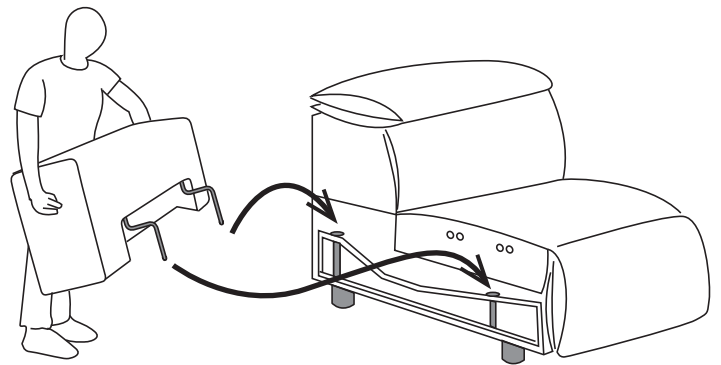


Step 5: Connect Power Cables

Important

 - Do not connect Nimbus to power until arms are assembled and modules connected.
- Every recliner must be connected to its own power supply.

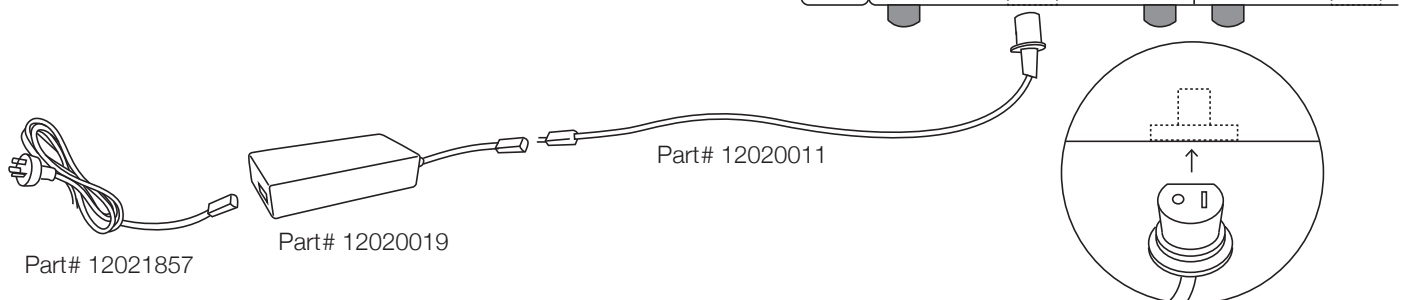

 Step 6: Connect Nimbus to Power

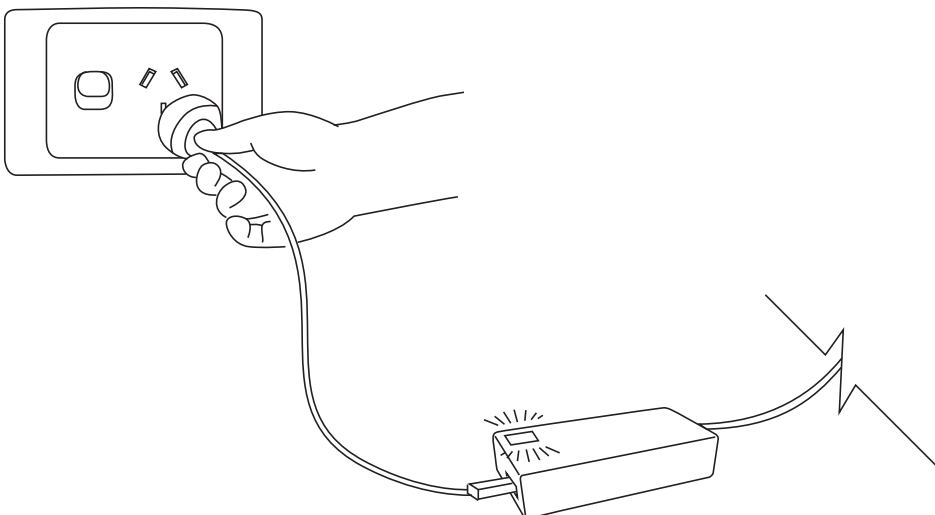


Nimbus



Quick Start Guide | Operation

KING[®]
L I V I N G

 Manual Operation

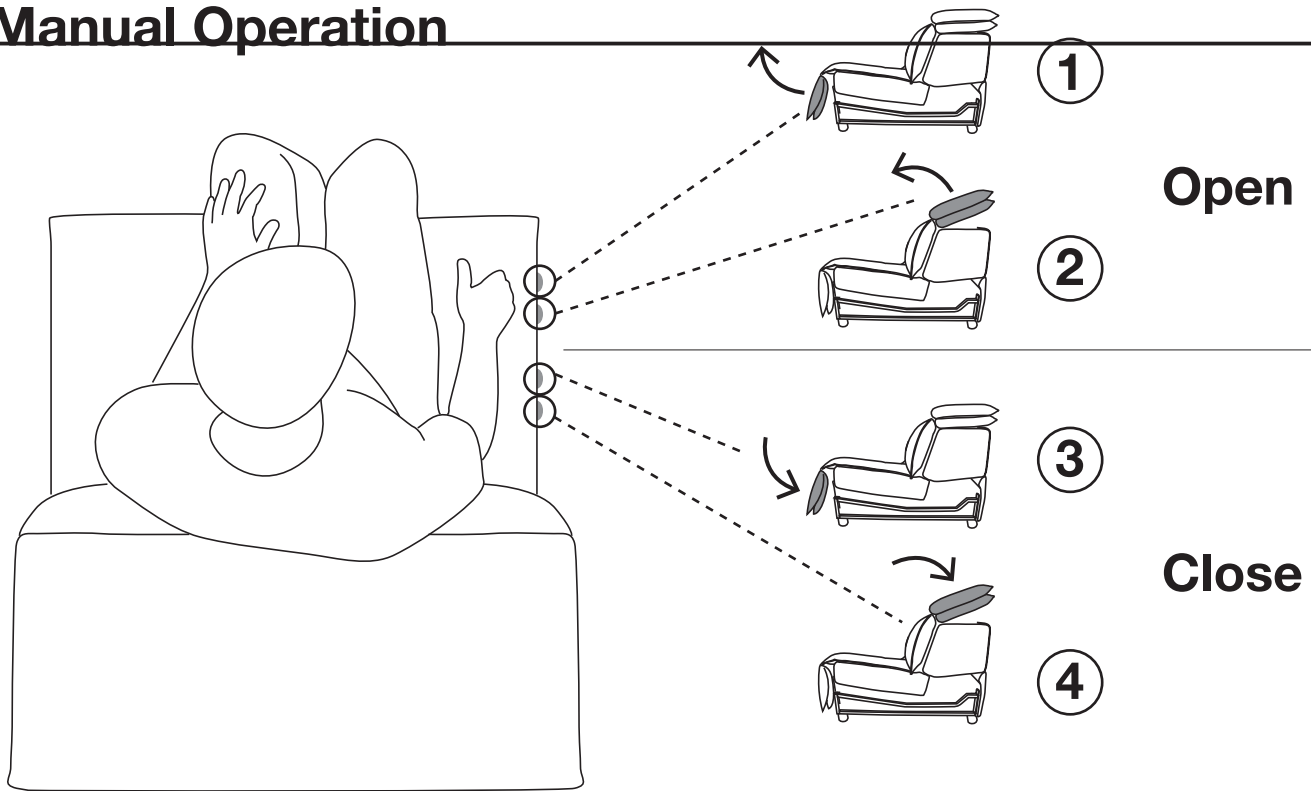





Automatic Close

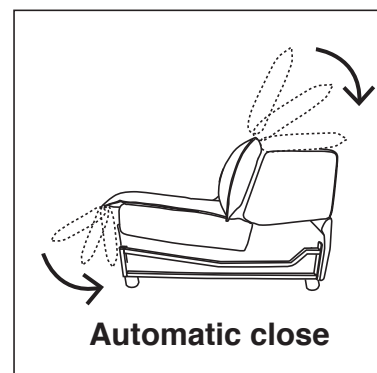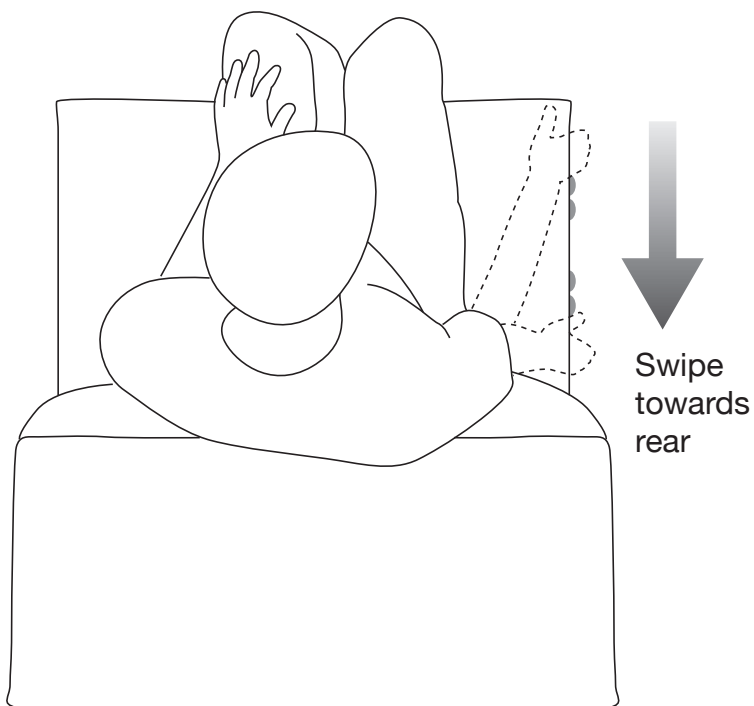  

Important

This should be completed everytime the power supply is connected or interrupted.

    Memory Position Recall

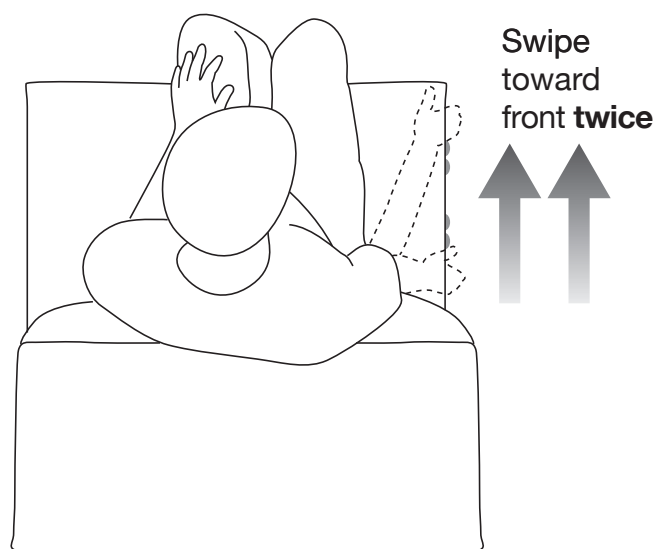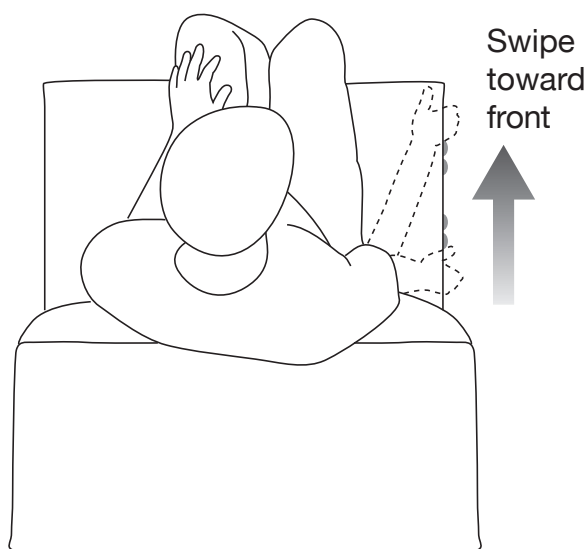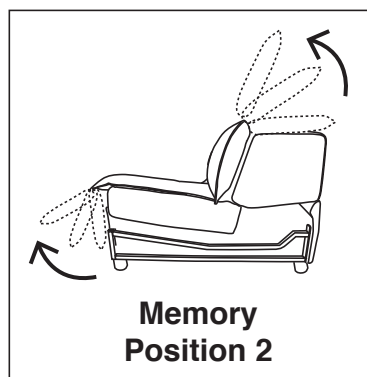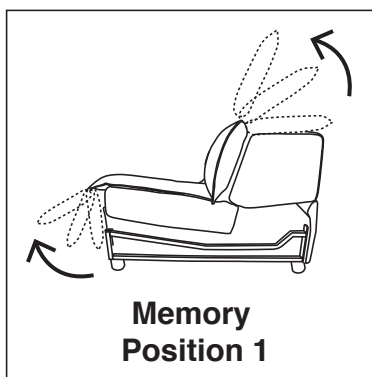


Set Memory Positions

Manual adjust to desired position

Set memory Position 1:
Press and hold Button ① and ③ for 8 seconds

Set memory Position 2:
Press and hold Button ② and ④ for 8 seconds

 Please note:
This will overwrite existing memory position.

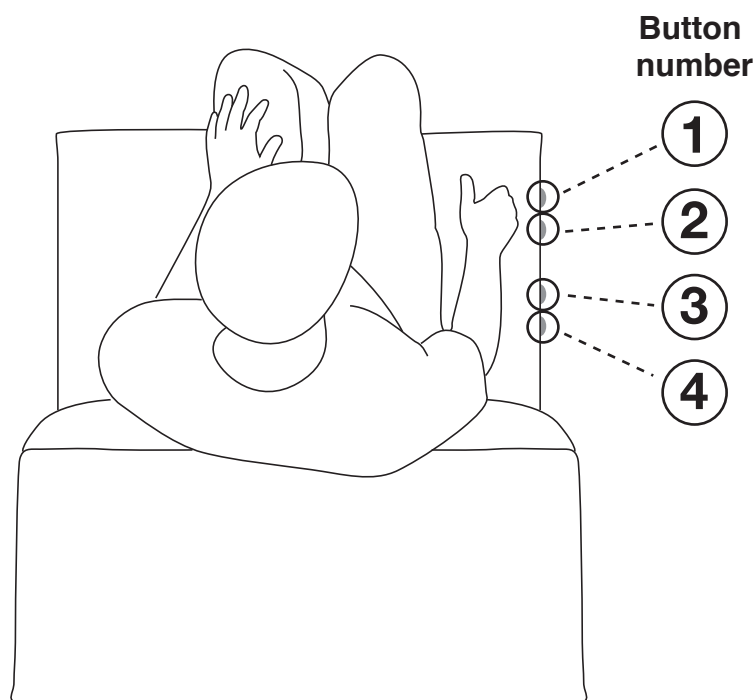

KING LIVING
CUSTOMER CARE:

AUSTRALIA:

T 1300 135 464

E service@kingliving.com.au

W kingliving.com.au

NEW ZEALAND:

T 0800 546 422

E service@kingliving.co.nz

W kingliving.co.nz

SINGAPORE:

T +65 6805 4198

E kingcare@kingliving.com.sg

W kingliving.com.sg

MALAYSIA:

T +603 7732 0272

E service@kingliving.my

W kingliving.my

Warning

Important:

Read the below instructions carefully before assembling and using this product.

IMPORTANT: ALWAYS FULLY RETRACT THE FOOTREST BEFORE SITTING IN OR GETTING OUT OF THE RECLINER.

To avoid damage to your recliner, the reclining function should only be operated when you are seated in the recliner. Any open footrests, which have a 15kg weight limit, must be closed before getting out of or into the seat. Sliding forward over the footrest to get out of the seat or getting into a fully reclined seat may cause damage to the mechanism of the recliner and can result in the sofa tipping forward in extreme cases. This built-in tipping point was specifically designed to preserve the integrity of the mechanism if too much pressure is placed on it and to avoid permanent damage. Damage caused by improper use of Recliners will not be covered under Warranty.

- Do not allow children to play with or on the unit or allow children to use the unit unsupervised. Serious injury or death could occur if head or body parts are trapped within or under the unit while it is being operated.
- Ensure children and pets are at a safe distance from the unit when operating the electric mechanism / moving parts.
- Keep hands and feet clear of moving parts at all times.
- Each unit should be operated only by the person sitting on it.
- Only use the electronic mechanism to operate the unit. Do not attempt to open the footrest by pulling on it.
- Always leave the unit in an upright and closed position when not in use to avoid children and pets crawling into any open cavities and becoming trapped under moving parts.
- Always disconnect the electrical cord attached to the unit from power before cleaning or moving the unit or when not in use for an extended period.
- Ensure the unit is clear of walls, furniture and other obstructions that may interfere with a clear path for operation. Ensure that no objects are left under the unit to avoid interference with the internal mechanisms.
- Do not use the unit if it is wet, in water, or around water or any liquid. Keep liquids away from unit. If liquids are spilled on the unit, disconnect from power immediately and wait until the spill is completely dry before reconnecting to power. Do not handle the plug or electric controls with wet hands.
- This product is for indoor residential use only.
- Use only a slightly damp cloth to clean metal parts of the mechanism. Before cleaning ensure the furniture has been disconnected from its power source.
- Ensure electrical wires are free from obstruction and not twisted or trapped. If any wires are damaged, turn off power supply and call King-Care.
- Do not attempt to disassemble or service the internal mechanism, motor or other parts. No customer serviceable parts inside.

KING LIVING CUSTOMER CARE:

AUSTRALIA:

T 1300 135 464
E service@kingliving.com.au
W kingliving.com.au

NEW ZEALAND:

T 0800 546 422
E service@kingliving.co.nz
W kingliving.co.nz

SINGAPORE:

T +65 6805 4198
E kingcare@kingliving.com.sg
W kingliving.com.sg

MALAYSIA:

T +603 7732 0272
E service@kingliving.my
W kingliving.my

Nimbus

 
Customer FAQs



1 Why doesn't my recliner module respond when a button is touched?

Your recliner module may not be connected to power. Follow these steps:

- 1) Ensure the power cable is plugged into the power socket and the power socket is switched ON
- 2) Ensure the power cable is connected to the power supply and the LED on the power supply is illuminated green
- 3) Ensure the extension power cable is connected to the power supply
- 4) Ensure the extension power cable is correctly plugged into the rear of the recliner module
- 5) If the recliner module still doesn't respond when you touch a button, continue below.

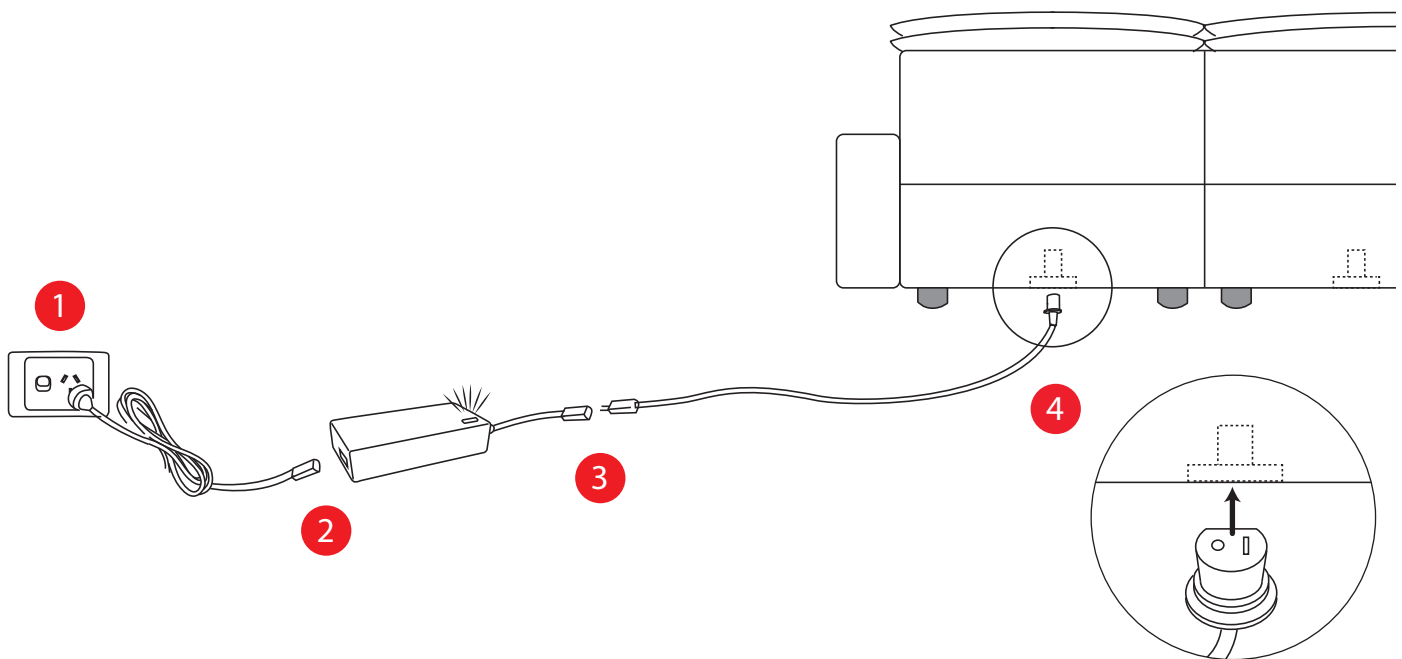

Your power supply may have overheated. Follow these steps:

- 1) Turn power OFF at the power socket, unplug power cable and wait for 15 minutes
- 2) Re-connect power cable and turn power ON at the power socket
- 3) Check that the light on the power supply is illuminated green
- 4) If the recliner module still doesn't respond when a button is touched, contact King Living Customer Care.

Nimbus

Customer FAQs

KING[®]
L I V I N G

2 Why aren't the seams on my recliner modules sitting straight?

For enhanced comfort Nimbus uses a soft multi-layered cushioning system.

 
The soft nature of these layers means that the seams on one recliner module may not perfectly align with the seams on another recliner module.

If there is a significant misalignment between recliner modules, they may be sitting at different heights. See FAQ 3 for more details.

3 Why does one recliner module sit higher or lower than another recliner module?

The adjustable feet on your recliner modules may be set to different heights. Follow these steps.

- 1) Turn power OFF at the power socket for each recliner module
- 2) Tilt each recliner module until they are lying on their backs
- 3) Adjust leg heights by rotating in a clockwise or anti-clockwise direction. Ensure the legs on all recliner modules are adjusted to the same height
- 4) Lower each recliner module onto its legs
- 5) Turn power ON at the power socket for each recliner module and ensure that the recliner modules are still connected to power (see FAQ 1 for more details)
- 6) Check the Setup section of your Quick Start Guide for instructions on how to correctly join the Nimbus modules back together.

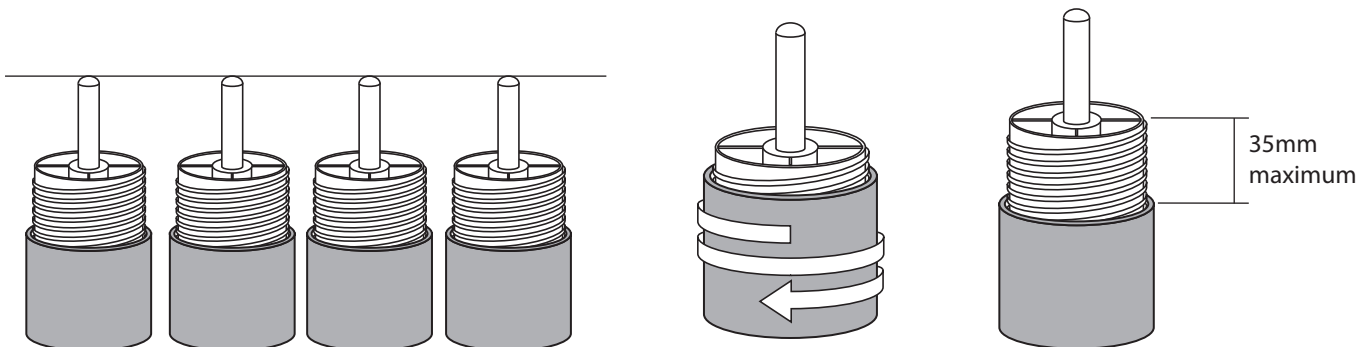

NOTE: If your recliner module has not been fitted with adjustable legs, contact King Living Customer Care.

Nimbus

 
Customer FAQs

KING[®]
L I V I N G

4 Why won't the footrest of my recliner module close?


The footrest on your recliner module will not close if the safety system detects an object under the footrest. Follow these steps.

- 1) Remove any objects from underneath the footrest such as toys or books.
- 2) If the footrest still doesn't close, continue below

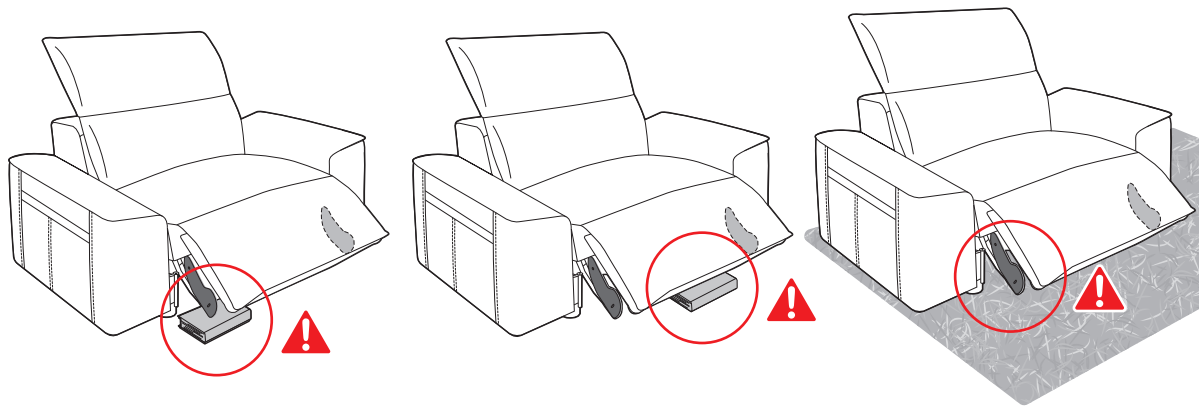

Your recliner module may be sitting on a thick carpet or rug which is activating the safety system. Follow these steps to raise your recliner above the carpet or rug.

 - 1) Turn power OFF at the power socket for each recliner module
- 2) Tilt recliner module until it is lying on its back
- 3) Increase leg heights by rotating each leg in an anti-clockwise direction. Ensure all legs are adjusted to the same height
- 4) Lower recliner module onto carpet/rug
- 5) Turn power ON at the power socket for each recliner module. Ensure that the recliner modules are still connected to power (see FAQ 1 for more details)
- 6) If your recliner module's footrest still doesn't close, contact King Living Customer Care.

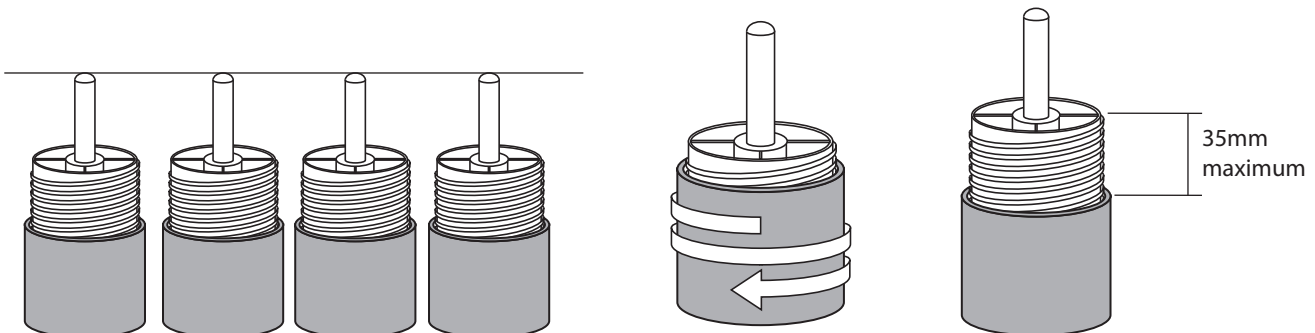

NOTE: If your recliner module has not been fitted with adjustable legs, contact King Living Customer Care.

Nimbus

 
Customer FAQs



5 Why can't my recliner module's memory positions be programmed or recalled?

The power to your recliner module may have been interrupted and therefore the home position needs to be reset. Follow these steps

- 1) Touch and hold buttons 3 and 4 for 15 seconds. **NOTE:** It is important to touch the buttons for the full 15 seconds
- 2) Set and recall memory positions as per the operation section of the Quick Start Guide
- 3) If your memory positions still cannot be set or recalled, contact King Living Customer Care.

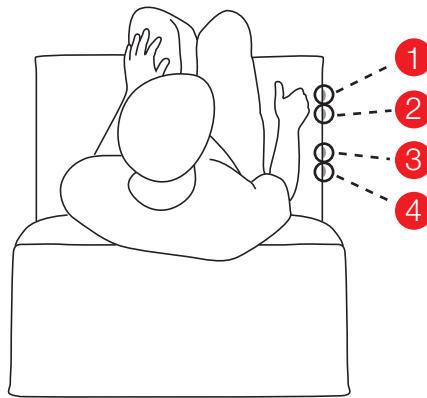

6 Why do my recliner modules have gaps between them?

Your recliner module is brand new and needs to be used in order to wear in the soft cushioning. After several weeks of use any gaps between your recliner modules will reduce. If the gaps don't reduce over time, continue below.

Your recliner modules may not be correctly joined together. Follow these steps.

- 1) Turn power OFF at the power socket for each recliner module
- 2) Check the Setup section of your Quick Start Guide for instructions on how to correctly join your Nimbus modules
- 3) Turn power ON at the power socket for each recliner module
- 4) If your recliner modules still have gaps between modules, contact King Living Customer Care.

Nimbus

 
 
 
Customer FAQs

7 Why is my leather recliner module making a rubbing noise during operation?

During operation a rubbing noise may be present as the leather surfaces of your recliner modules slide past one another. Applying King-Care Leather Conditioner will not only ensure the soft, luxurious feel of your leather is maintained, but will allow the surfaces to move freely over each other and reduce any rubbing noises.

Apply King-Care Leather Conditioner to:

- 1) The sides of the lumbar
- 2) The sides of the seats
- 3) The sides of the media console
- 4) The insides of each arm

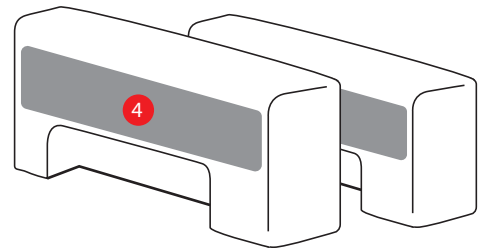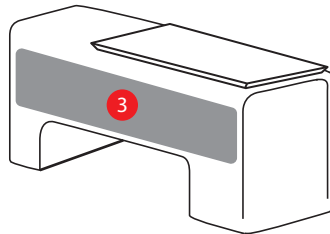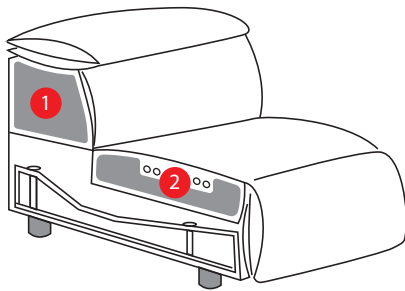

NOTE: If you do not have King-Care Leather Conditioner, contact King Living Customer Care.

8 Why does my leather recliner module have slight wrinkles?

The Nimbus is a luxurious, soft cushioned design which has been engineered for comfort. The multi-layered cushioning system combined with the natural stretch of high quality, soft European leathers will result in some slight wrinkling in your recliner module covers – this is perfectly normal.

Battery: King Cloud & Nimbus

Assembly Instructions

KING[®]
L I V I N G

 
Two people are required for safe assembly.

Opening Box


Ensure that you DO NOT push your knife too far into the box when cutting it open.

Lift the cardboard with one hand while cutting, thereby keeping the blade well away from your furniture.


To assemble your furniture please follow the steps below.

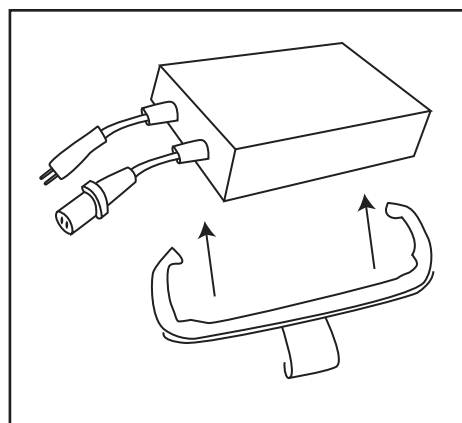

 
1.

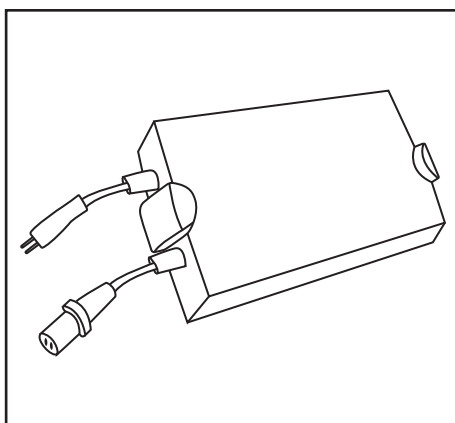

 
2.

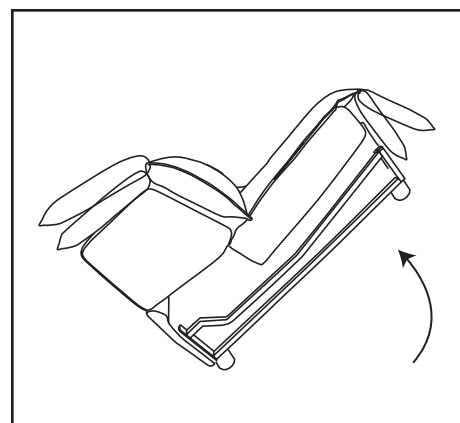

 
3.

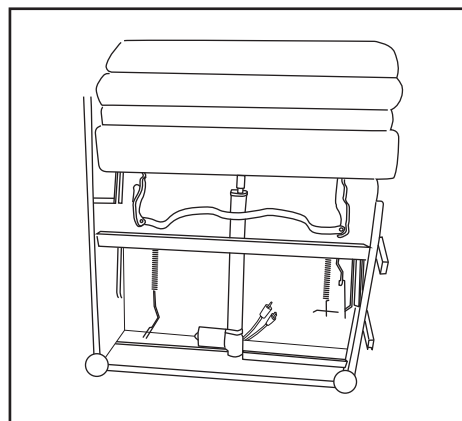

 
4.

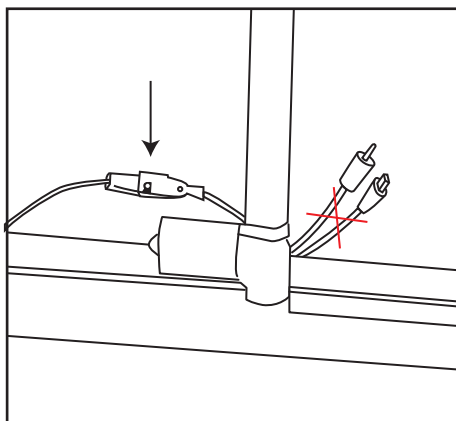

 
5.

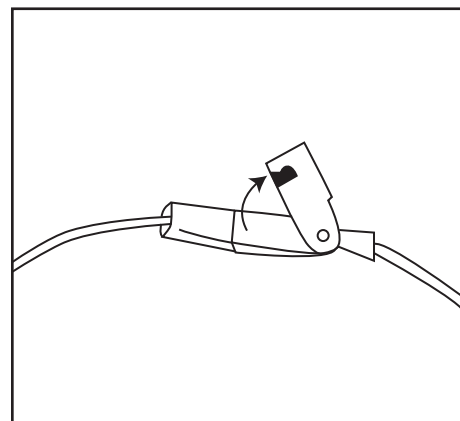

 
6.

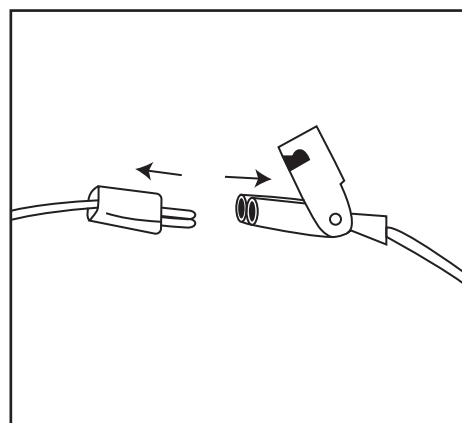

 
7.

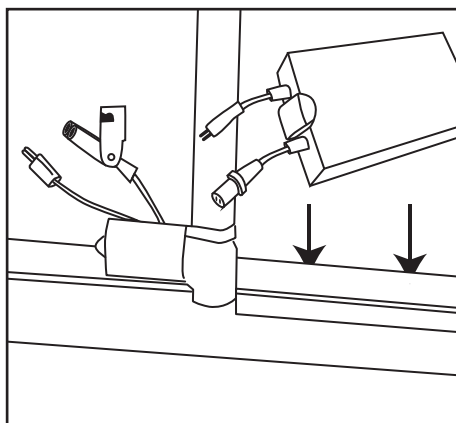

 
8.

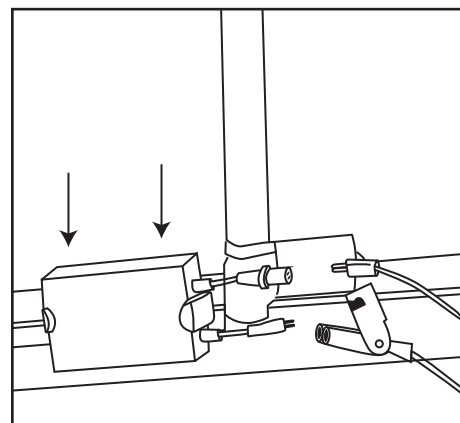

 9.

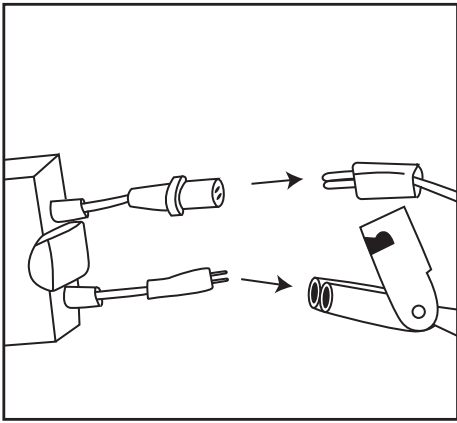

 10.

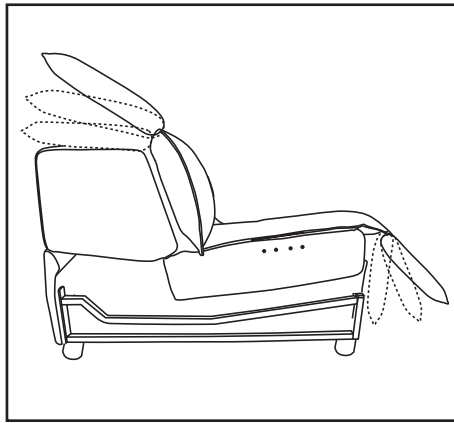

11.

**KING LIVING
CUSTOMER CARE:**

AUSTRALIA:

T 1300 135 464
E service@kingliving.com.au
W kingliving.com.au

NEW ZEALAND:

T 0800 546 422
E service@kingliving.co.nz
W kingliving.co.nz

SINGAPORE:

T +65 6805 4198
E kingcare@kingliving.com.sg
W kingliving.com.sg

MALAYSIA:

T +603 7732 0272
E service@kingliving.my
W kingliving.my

Nimbus Media Console

Assembly Instructions

 
KING[®]
L I V I N G

Two people are required for safe assembly.


Opening Boxes

DO NOT use a knife to open the King Living boxes - you may damage your furniture. Peel off the tape, then lift & separate the cardboard flaps to open.


Assemble your furniture by following the steps below.

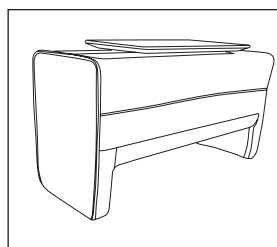


1

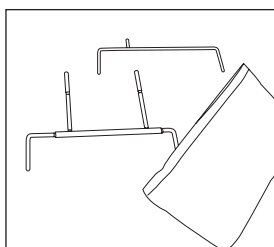 


2

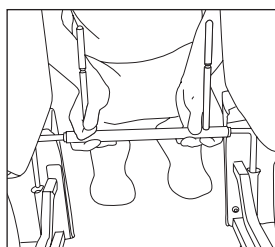 


3

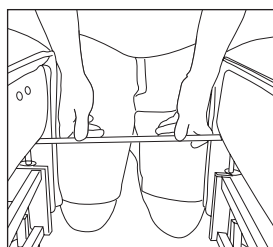 


4

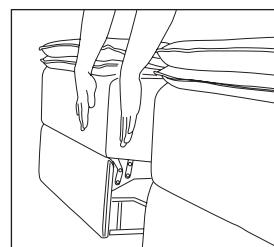 


5

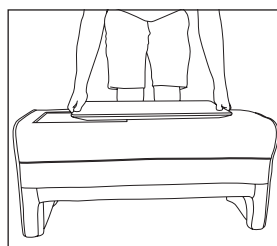 


6

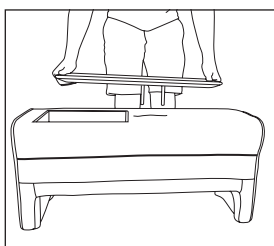 


7

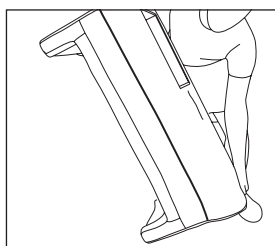 


8

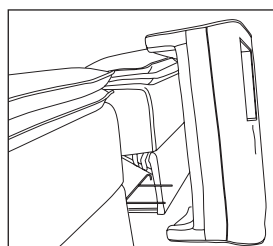 

9

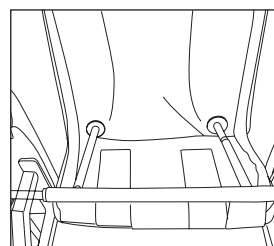 


10

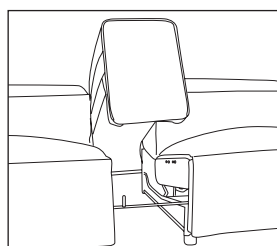 


11



 
12

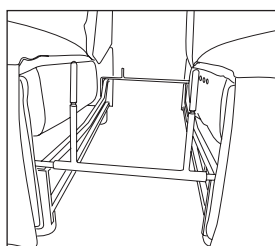


13 (Putting in console the other way)

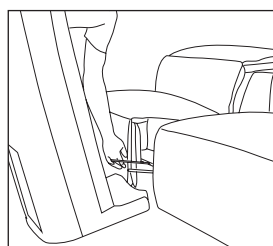 


14

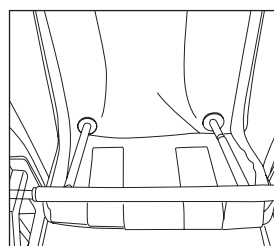 


15

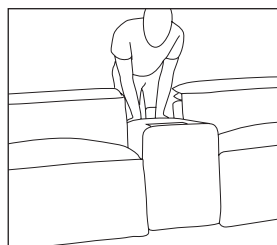 


16

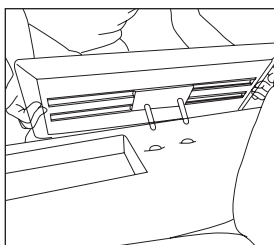 


17

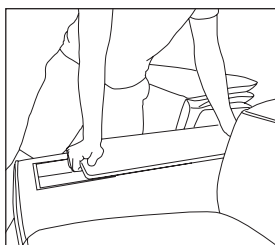 

18

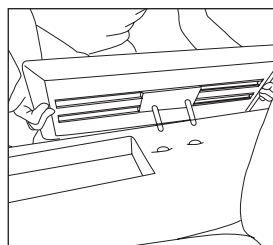 

19 Installing USB cable

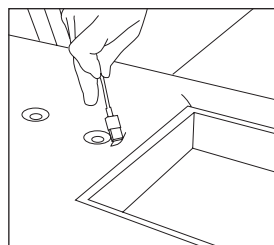 

20

KING LIVING
CUSTOMER CARE:
AUSTRALIA:

T 1300 135 464
E service@kingliving.com.au
W kingliving.com.au

NEW ZEALAND:

T 0800 546 422
E service@kingliving.co.nz
W kingliving.co.nz

SINGAPORE:

T +65 6805 4198
E kingcare@kingliving.com.sg
W kingliving.com.sg

MALAYSIA:

T +603 7732 0272
E service@kingliving.my
W kingliving.my